

PARTS INDEX

A

ACCELERATOR CABLE.....	F2-139
A/C RELAY.....	U-45
ACTUATOR.....	M-9, T-47
ACTUATOR CABLE.....	T-46
ACV SOLENOID VALVE.....	F1-60
AIR CLEANER.....	F1-80
AIR CONTROL VALVE (No.1).....	F1-59
AIR CONTROL VALVE (No.2).....	F1-60
AIR/FUEL (A/F) SOLENOID VALVE.....	F1-54
AIR VENT SOLENOID VALVE.....	F1-72
AIRFLOW SENSOR.....	F2-179
ALTERNATOR.....	G-9
ATMOSPHERIC PRESSURE SENSOR.....	F1-106
AUTOMATIC TRANSMISSION (ELECTRONICALLY-CONTROLLED).....	K2-1
ACCUMULATORS.....	K2-59
ADAPTER CASE AND PARKING MECHANISM.....	K2-99
ATF THERMOSENSOR.....	K2-36
ATF THERMOSWITCH.....	K2-38
BAND SERVO.....	K2-78
CONTROL VALVE BODY.....	K2-103
DROPPING RESISTOR.....	K2-38
EC-AT CONTROL UNIT.....	K2-39
FORWARD CLUTCH DRUM.....	K2-85
FORWARD CLUTCH HUB.....	K2-82
FRONT INTERNAL GEAR.....	K2-82
HIGH CLUTCH AND FRONT SUN GEAR.....	K2-71
HOLD OFF SWITCH.....	K2-35
INHIBITOR SWITCH.....	K2-35
LOW AND REVERSE BRAKE.....	K2-93
LOWER VALVE BODY.....	K2-116
OIL PUMP.....	K2-61
OIL SEAL.....	K2-102
OVERRUNNING CLUTCH HUB.....	K2-82
P RANGE SWITCH.....	K2-148
REAR INTERNAL GEAR.....	K2-82
REVERSE CLUTCH.....	K2-65
SELECTOR LEVER.....	K2-149
SHIFT-LOCK ACTUATOR.....	K2-148
SOLENOID VALVES.....	K2-38
SPEED SENSOR 1.....	K2-37
TORQUE CONVERTER.....	K2-58
UPPER VALVE BODY.....	K2-108
AUTOMATIC TRANSMISSION (HYDRAULICALLY-CONTROLLED).....	K1-1
ACCUMULATOR.....	K1-64
CONNECTING SHELL.....	K1-81
CONTROL VALVE BODY.....	K1-104
DRIVE PLATE.....	K1-126
DIRECT CLUTCH.....	K1-56
DRUM SUPPORT.....	K1-64
EXTENSION HOUSING AND PARKING MECHANISM.....	K1-95

4AT CONTROL UNIT.....	K1-30
FRONT CLUTCH.....	K1-71
FRONT PLANETARY GEAR UNIT.....	K1-81
GOVERNOR.....	K1-92
INHIBITOR SWITCH.....	K1-25
KICKDOWN AND 4-3 SWITCH.....	K1-26
KICKDOWN RELAY.....	K1-27
KICKDOWN SOLENOID.....	K1-27
LOCKUP SOLENOID.....	K1-29
LOW AND REVERSE BRAKE.....	K1-87
OD BAND SERVO.....	K1-61
OD CANCEL SOLENOID.....	K1-28
OD CASE.....	K1-64
OD CONNECTING SHELL.....	K1-54
OD OFF SWITCH.....	K1-28
OD PLANETARY GEAR UNIT.....	K1-54
OIL COOLER.....	K1-125
OIL PRESSURE SWITCH.....	K1-30
OIL PUMP.....	K1-49
OIL SEAL.....	K1-97
REAR CLUTCH.....	K1-76
REAR PLANETARY GEAR UNIT.....	K1-83
2ND BAND SERVO.....	K1-68
TORQUE CONVERTER.....	K1-49
UPPER VALVE BODY.....	K1-101
AUTOMATIC TRANSMISSION (TRANSFER CASE).....	K3-1

B

BAC VALVE.....	F2-142
BACK WINDOW GLASS.....	S-22
BATTERY.....	G-7
BLOWER MOTOR.....	U-21
BLOWER UNIT.....	U-21
BOOT.....	N-7
BRAKE PEDAL.....	P-7

C

CARBURETOR.....	F1-85
CATALYTIC CONVERTER.....	F1-74, F2-168
CHARCOAL CANISTER.....	F2-167
CHECK-AND-CUT VALVE.....	F1-71, F2-166
CIRCUIT OPENING RELAY.....	F2-153
CLUTCH COVER.....	H-17
CLUTCH DISC.....	H-17
CLUTCH MASTER CYLINDER.....	H-8
CLUTCH PEDAL.....	H-5
CLUTCH RELEASE CYLINDER.....	H-12
CLUTCH SWITCH.....	F1-105, F2-180, T-46
COASTING RICHER SOLENOID VALVE... ..	F1-67
COMBINATION SWITCH.....	T-9
COMPRESSOR.....	U-33
CONDENSER.....	U-43
CONTROL SWITCH PANEL.....	U-19

PARTS INDEX

CONTROL VALVE F1-77
 COOLING FAN..... E-6
 COOLING UNIT U-31
 CRUISE CONTROL MAIN SWITCH T-10,47
 CRUISE CONTROL SWITCH..... T-47
 CRUISE CONTROL UNIT..... T-49

D

DASHPOT (FOR M/T)..... F1-68
 DIFFERENTIAL (FRONT AND REAR) M-50
 DISTRIBUTOR..... G-24
 DOORS S-15
 DRIVE BELT..... N-35
 DRL RELAY (CANADA)..... T-34
 DRL RESISTOR (CANADA)..... T-35
 DUTY SOLENOID VALVE F1-63
 DYNAMIC CHAMBER F2-139

E

EGR CONTROL VALVE F1-62
 EGR POSITION SENSOR..... F1-63
 ENGINE (B2200) B1-1
 AUXILIARY PARTS..... B1-63
 COMPRESSION..... B1-6
 CYLINDER BLOCK I..... B1-30,47
 CYLINDER BLOCK II B1-31,52
 CYLINDER HEAD..... B1-28,56
 CYLINDER HEAD GASKET B1-13
 DRIVE BELT B1-5
 FRONT OIL SEAL B1-18
 HYDRAULIC LASH ADJUSTER (HLA) .. B1-6
 REAR OIL SEAL..... B1-19
 TIMING BELT B1-8,26
 ENGINE (B2600i) B2-1
 AUXILIARY PARTS..... B2-30,72
 BALANCER CHAIN..... B2-34,60
 CHAIN CASE AND OIL PAN..... B2-33,65
 COMPRESSION..... B2-6
 CYLINDER BLOCK B2-36,53
 CYLINDER HEAD..... B2-31,67
 CYLINDER HEAD GASKET B2-14
 DRIVE BELT B2-5
 FRONT OIL SEAL B2-21
 HLA TROUBLESHOOTING GUIDE B2-6
 REAR OIL SEAL..... B2-23
 TIMING CHAIN..... B2-8,34,60
 ENGINE CONTROL UNIT F1-108
 EVAPORATOR U-32

F

FLASHER UNIT T-35
 FLYWHEEL H-18

FRONT AXLE (4x2) M-30
 FRONT AXLE (4x4) M-21
 FRONT AXLE DRIVESHAFT (4x4) M-37
 FRONT BRAKE (DISC)..... P-19
 FRONT BUMPER S-5
 FRONT COMBINATION LIGHTS..... T-24
 FUEL CHECK VALVE F1-84
 FUEL CUT VALVE..... F1-84
 FUEL FILTER..... F1-83, F2-149
 FUEL LID REMOTE RELEASE S-38
 FUEL PUMP (EGI)..... F2-150
 FUEL PUMP (ELECTRICAL TYPE) F1-82
 FUEL PUMP (MECHANICAL TYPE)..... F1-83
 FUEL PUMP CONTROL UNIT..... F1-83
 FUEL TANK F1-84, F2-147
 FUEL VAPOR VALVE..... F2-163
 FUSE BOX..... T-8

H

HEADLIGHTS T-24
 HEADLINER AND TRIM..... S-33
 HEATER CORE U-23
 HEATER UNIT..... U-23
 HOOD S-4
 HORN T-36
 HORN RELAY..... T-36

I

IDLE-UP SOLENOID VALVE F1-116
 IDLE SWITCH..... F1-105, F2-183
 IGNITION COIL..... G-23
 IGNITION KEY SWITCH T-9
 INHIBITOR SWITCH F1-106
 INJECTOR F2-156
 INSTRUMENT PANEL..... S-29
 INTAKE AIR THERMOSENSOR. F1-107, F2-180
 INTAKE MANIFOLD F2-140
 INTERIOR LAMP T-26

L

LICENSE PLATE LIGHT T-26
 LOCK AND FREE SOLENOID VALVES..... M-9

M

MAIN FUSE AND FUSE BOX T-8
 MAIN RELAY F2-184
 MALFUNCTION INDICATOR LAMP
 (MIL)..... F2-186
 MANUAL TRANSMISSION (B2200) J1-1
 MANUAL TRANSMISSION (B2600i)..... J2-1

PARTS INDEX

MANUAL TRANSMISSION
(TRANSFER CASE)..... J3-1
MASTER CYLINDER..... P-9
METER..... T-11
MIXTURE CONTROL VALVE..... F1-68

N

NEUTRAL SWITCH..... F1-105

O

OIL COOLER (G6 ENGINE)..... D-7
OIL FILTER..... D-7
OIL PAN..... D-8
OIL PUMP..... D-11, N-28
ONE-WAY CHECK VALVE..... M-8
OXYGEN SENSOR..... F1-55, F2-182

P

PULSATION DAMPER..... F2-151
PANEL LAMP CONTROL SWITCH..... T-10
PARKING BRAKE CABLE..... P-33
PARKING BRAKE LEVER..... P-31
PCV VALVE..... F1-79, F2-163
PRESSURE REGULATOR..... F2-154
PROPELLER SHAFT..... L-4
PROPORTIONING BYPASS VALVE (PBV)... P-30
PTC HEATER..... F1-75
PTC HEATER RELAY..... F1-75
PURGE CONTROL VALVE (No.1)..... F1-70
PURGE CONTROL VALVE (No.2)..... F1-71
PURGE CONTROL VALVE (No.3)..... F1-71
PURGE SOLENOID VALVE..... F1-72

Q

QUARTER WINDOW GLASS (CAB PLUS) .. S-24

R

RADIATOR..... E-7
RADIATOR CAP..... E-6
REAR AXLE (4x4 AND 4x2)..... M-44
REAR BRAKE (DRUM, 4x2)..... P-27
REAR BRAKE (DRUM, 4x4)..... P-23
REAR BUMPER..... S-6
REAR COMBINATION LIGHTS..... T-25
REAR SHOCK ABSORBER AND
LEAF SPRING (4x2 AND 4x4)..... R-28
RECEIVER/DRIER..... U-45
REED VALVE..... F1-60

REFRIGERANT CONTAINER
SERVICE VALVE..... U-24
REFRIGERANT PRESSURE SWITCH..... U-46
RELEASE BEARING..... H-17
RFW CONTROL UNIT..... M-10
RFW MAIN SWITCH AND
LOCK INDICATOR LAMP..... M-8
RFW UNIT..... M-12

S

SEATS..... S-30
SEAT BELTS..... S-31
SENDER UNITS..... T-19
SENSOR ROTOR..... P-55
SEPARATOR..... F2-165
SHOCK ABSORBER (4x2 AND 4x4)..... R-10
SIDE PROTECTOR..... S-25
SLOW FUEL CUT SOLENOID VALVE..... F1-67
SOLENOID VALVE (PRC)..... F2-160
SPARK PLUG..... G-22
SPEED SENSOR..... P-54, T-42
STABILIZER (4x4)..... R-26
STABILIZER AND TENSION ROD (4x2)..... R-24
STEERING GEAR AND LINCAGE
(MANUAL)..... N-12
STEERING GEAR AND LINCAGE
(POWER STEERING)..... N-24
STEERING WHEEL AND COLUMN
(MANUAL)..... N-9
STEERING WHEEL AND COLUMN
(POWER STEERING)..... N-24
STOPLIGHT SWITCH..... T-37

T

TAILGATE..... S-37
THERMOSTAT..... E-10
THERMOSWITCH..... U-32
THROTTLE BODY..... F2-138
THROTTLE SENSOR..... F2-181
TIRES..... Q-3
TORSION BAR SPRING AND
LOWER ARM (4x2)..... R-11
TORSION BAR SPRING AND
LOWER ARM (4x4)..... R-16
TRANSFER CASE SWITCH
(4x4 INDICATOR SWITCH)..... M-7
TRANSFER CASE SWITCH
(NEUTRAL SWITCH)..... M-7
TWO-WAY CHECK VALVE..... F2-166

V

VACUUM CONTROL VALVE..... F1-80

PARTS INDEX

VACUUM RESERVOIR M-10
VACUUM SENSOR..... F1-107
VACUUM SOLENOID VALVE F1-67

W

WARNING BUZZER..... T-22
WARNING LIGHTS AND SENDER UNITS... T-19
WASHER MOTOR S-11
WATER PUMP..... E-8
WATER TEMPERATURE SWITCH F1-105
WATER THERMOSENSOR F1-106, F2-179
WATER THERMOVALVE F1-71
WHEELS Q-3
WINDSHIELD..... S-19
WINDSHIELD WIPER AND WASHER..... S-10
WIPER MOTOR S-10